



Quick Start Guide

Vivitar ViviCam T328 Digital Camera with Touch Screen

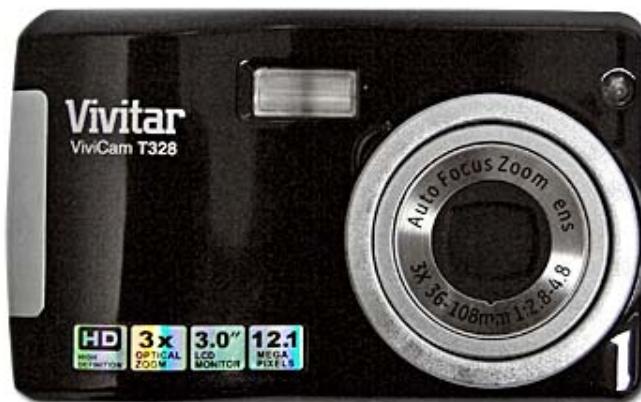


1. Know your camera:

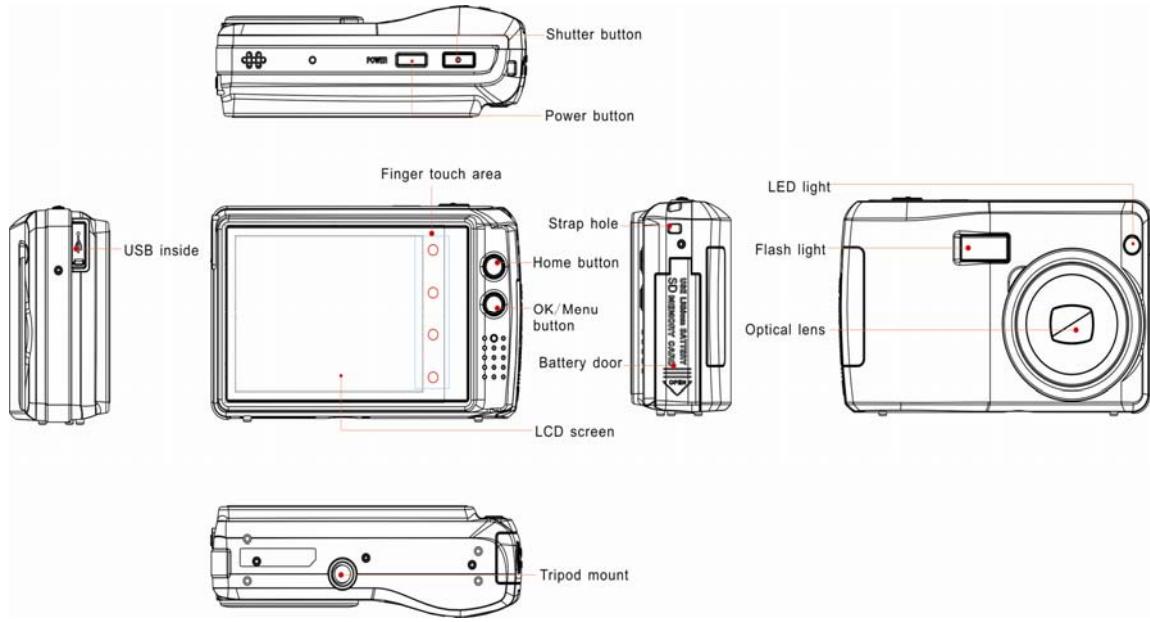


2. Open and insert the Lithium battery (included in the packaging) with the correct polarity into the battery compartment on the side of the camera.

To charge your battery turn the camera off and connect it to an available USB port on your computer. Your computer needs to be on and running while the camera is charging.

The green LED will light up. Your camera will be fully charged a few hours later when the LED turns off.

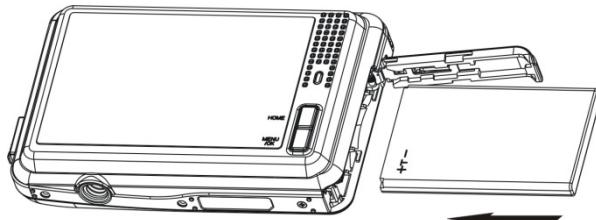

3. In order for you to capture images with your camera you will need to insert an SD Memory card (up to 8GB).
Memory cards are not included and need to be purchased separately.

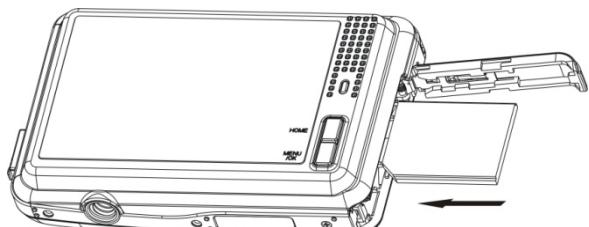

4. You are now ready to capture quality images
 - Turn on the camera by pressing the “Power” button
 - The LCD lights up and the lens extracts like a periscope
 - The camera opens to the **Photo** mode by default
 - Aim the camera in the direction of the subject you wish to capture
 - The image will appear in the LCD screen
 - Holding the camera steady press the “Shutter” button with your right index finger
 - The image is automatically saved to the memory card
 - For instructions on how to use this Touch Screen camera and other camera features including the **Video** capture setting see the User’s Guide included on the CD-ROM

5. Install the Photags Express software

- The camera and application are compatible on Windows Pentium 3 and up running Windows XP and Vista.
- The camera also connects to Mac OS X (10.2.6) or later
- Insert the Photags Express disc into the CD-ROM of your computer
- The application will automatically begin to run
- Follow the easy instructions to install the software on your computer
- Once the software is installed simply double-click the Photags Express icon on your desktop



- The Photags Express application opens
- Connect your camera to an available USB port on your computer with the USB cable provided in the package
- Wait a few seconds for the computer to recognize your camera

6. Download and edit the images

Vivitar makes it easier to download the images

- Click the “**Get Photos**” button on the top of the Photags Express main menu
- Follow the download wizard step-by-step instructions
- The images on your camera will be downloaded to your computer
- Click the “**Select Photos**” button on the main menu
- All the images will appear as thumbnails in the Select Photos window
- Using the Photags Express software you can edit, share and print your photos



We thank you for choosing our ViviCam T328 12.1 Mega-Pixel Digital Camera with Touch Screen.

For technical assistance and information see the User`s Guide or the Help and Show Me How tutorial in the Photags Express software.



© 2009 Sakar International, Inc. All rights reserved.

195 Carter Drive
Edison, NJ 08817
www.vivitar.com